

Installation Reference


Topic: Modifying B-Line Electrodes

Please read all the instructions listed below carefully to familiarize yourself with the project before attempting to perform any of the work or unpacking any further


Required Materials

- None

1. Remove the Electrode from the Shell, being careful not to scratch the precious metal.
2. Protect the precious metal.
3. Using a rubber mallet, knock off the cap at the bottom of the Electrode.

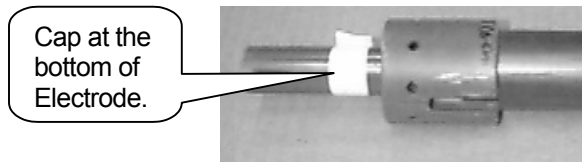


4. Using wrenches, disconnect the electrical from the tab.

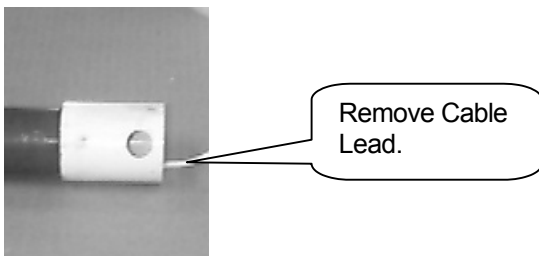

Required Tools

- Rubber Mallet
- Wrench (2)

5. This step requires two people. While one person holds the Electrode, another person should twist the PVC piece of pipe off. **NOTE:** All jewelry should be removed to avoid damaging the precious metal.

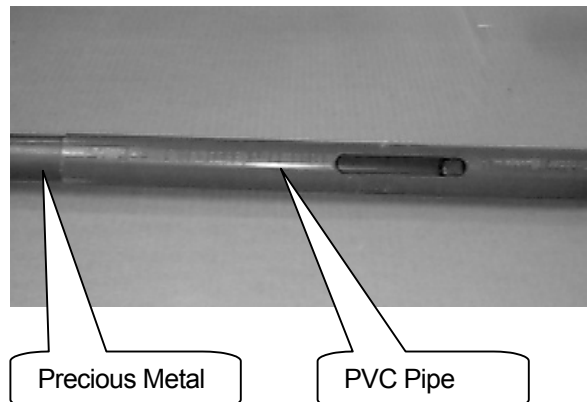

6. At this point the Electrode should be totally bare. The Electrode Tab may need to be cleaned. The rest of the Electrode should already be clean.
7. Refer to Bulletin #993129 for instructions on shrink wrapping and Bulletin #993159 for instructions on attaching the supply tubing kit.

For more information see the original manual that came with the equipment or

- call UFS at the phone number shown above.