



## T5 Installation Procedure (Step by Step)

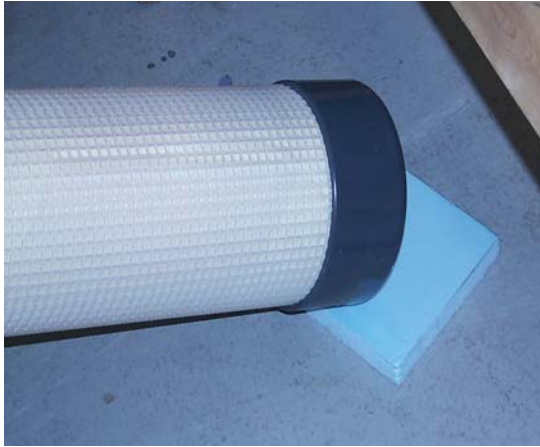


**#1**  
Place bottom of T5 ME Shell on a piece of foam.



**#2**  
Slowly insert the SS Electrode into the Membrane Shell. ***Do not drop the electrode into Membrane Shell as damage may occur.***

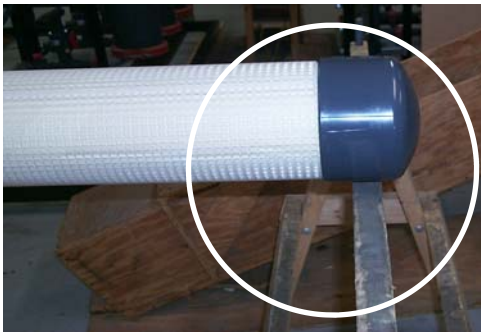

**#3**  
Place cap end of the T5 on a saw horse.

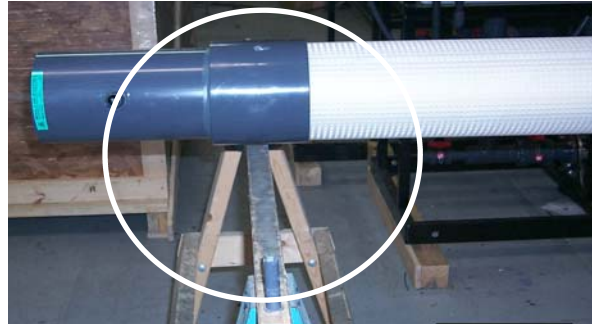

**#4**  
Place collar end (the other end) of T5 on opposite saw horse.



**#5**  
Place metal brackets on neck (located at the collar end) of T5.



**#6**  
Tighten metal clamps to 21 FT/LBS.



**#7**  
Make sure brackets are straight once they are tightened.



**#8**  
Place PVC brackets on the metal brackets.  
**Note: Leave hardware loose!**



**#9**  
Side view of PVC Brackets in place.

PVC Bracket adjust

T5 Against Tank Wall



**#10**  
Once the T5 Cell is placed in the tank, adjust each PVC bracket so the T5 touches the tank wall. Once the brackets are adjusted with the T5 against the tank wall, tighten all hardware.

**#11**  
Hook up supply tubing, return tubing and electrical as required.