

# Installation Reference

## Topic: TECTRON™ Floor Shell Replacement

Please read all the instructions listed below carefully to familiarize yourself with the project before performing work or unpacking any further

### Required Materials

- S-80 Heavy Bonded Cement
- S-80 PVC Primer

### Required Tools

- Pipe or Strap Wrench

1. Remove the Shell from the Bulkhead, leaving the Electrode attached to the Bulkhead. (See Figure 1)
1. Slip the new female adapter over the Electrode and tighten to the Bulkhead. (See Figure 2)
1. CAREFULLY slip the new Shell over the Electrode and apply PVC Primer and PVC Cement to the female adapter and the neck of the Shell. (NOTE: This procedure will require two people. One to shake the shell so the Electrode is properly seated and one to guide the Shell.) (See Figure 3)
2. The diamond on the Shell should match up with the diamond on the Bulkhead. Both should be in the "up" position. (See Figure 4)

**For more information** see the original manual that came with the equipment or call UFS at the phone number shown above.

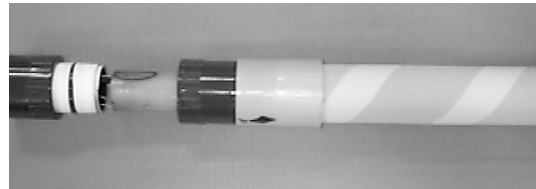


Figure 1

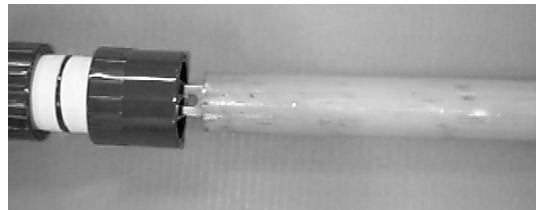


Figure 2

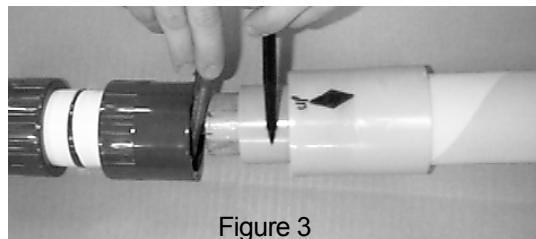


Figure 3

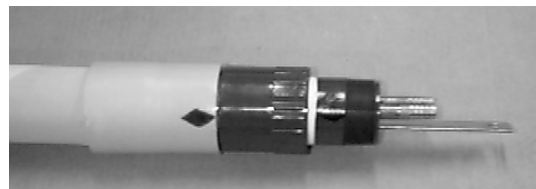


Figure 4